

Scene+ Controllers

Scene+ dimmers are versions of the Scene R dimmers which are able to be controlled by more sophisticated control circuits. They contain a data control interface which allows connection to a range of controllers.

The Scene+ dimmers are outwardly the same as the Scene R and are available in the same ranges. The connections to the controllers must be made via twisted pair cables (Cat 5 cable is suitable).

Scene+ 4 Scene Controller

This is a single channel controller which fits on a single plate and is connected via two twisted pair of wires.

Mode of Operation

There are four scenes, designated by four internally illuminated push buttons. Each scene is called up by a short press on the desired button, which will allow the light level to fade up from zero to the stored level.

Changing scenes by selecting another button will cause the level to fade to the next scene setting. The selected scene is designated by the button being illuminated. To switch off, another short press on the selected scene will cause the light to go off.

Changing levels is achieved by pressing and holding the scene button. The level will slowly change from its present level to full, then down again to zero. This sequence will continue until the button is released, which is held as the new level of that scene.

Part Number:

6SCCP54 Scene+ 4 Scene Preset Controller



Specification